

BWT Pearl Connect



QUICK STARTER

A lire attentivement et à conserver pour consultation ultérieure

ATTENTION

Assurez-vous que votre BWT Pearl Connect puisse se connecter à votre réseau Wifi. Si besoin nous vous conseillons d'utiliser un répéteur Wifi pour étendre votre réseau jusqu'à votre local technique.

ATTENTION


Le BWT Pearl Connect peut se connecter uniquement à un réseau Wifi 2.4Ghz.
normes 802.11 b/g/n, sécurité WPA / WPA2, débit 20 - 40MHZ, DHCP - IPV4.

1. Téléchargement de l'application



2. Premier démarrage


Pour connecter votre BWT Pearl Connect, au premier démarrage suivre les étapes illustrées ci-dessous ou aller dans Paramètre - Appairage - Ajouter un appareil puis suivre les étapes illustrées ci-dessous :

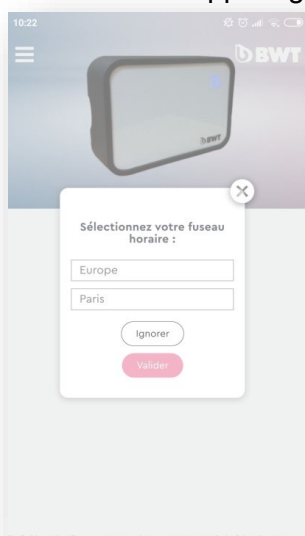


Indiquer la région de votre fuseau horaire




Activez le mode Bluetooth

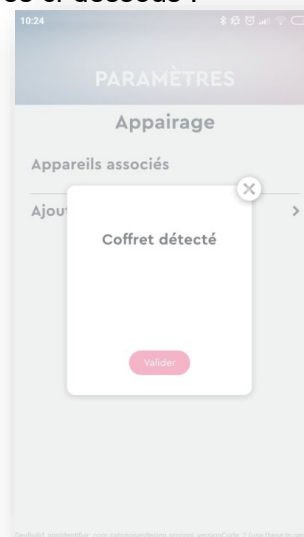

Sélectionner votre réseau wifi ou appuyer sur ignorer pour saisir manuellement votre nom de réseau et mot de passe.

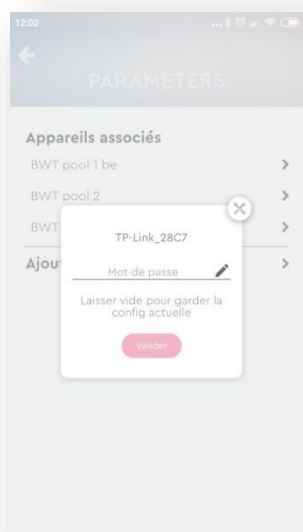


Saisir votre mot de passe

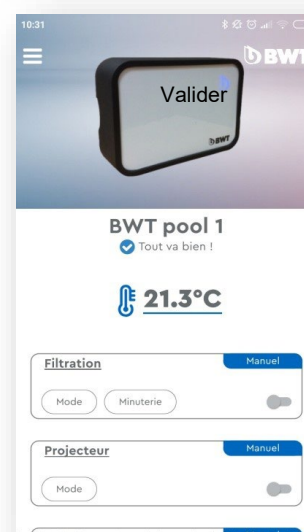

Accueil-suite

3. Menu Paramètre

Pour accéder aux réglages du BWT Pearl Connect et aux différents appareils connectés, appuyer sur le bouton menu en haut à gauche et appuyer sur Paramètres.

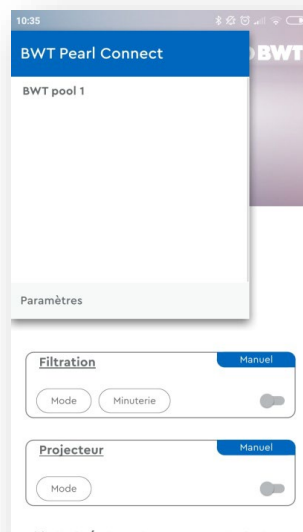

BWT Pearl Connect



QUICK START GUIDE

To be read carefully and kept for future reference.

CAUTION

Make sure that your BWT Pearl Connect can connect to your WiFi network. If necessary, we recommend that you use a WiFi repeater to extend your network to cover your plant housing.

CAUTION


BWT Pearl Connect can only connect to a 2.4Ghz WiFi network.
802.11 b/g/n, WPA / WPA2, speed 20 - 40MHZ, DHCP - IPV4.

4. Download the app




5. First start up



To connect your BWT Pearl Connect, upon first start up follow the steps shown below or go to Parameters – Pairing – Add a device:

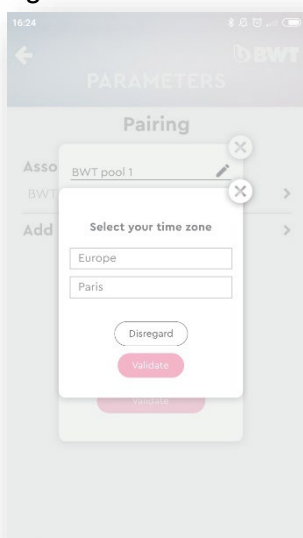


Select your time zone

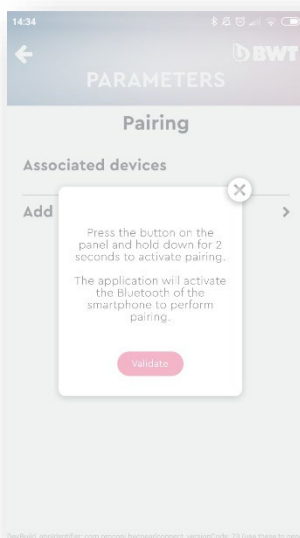


Activate Bluetooth mode

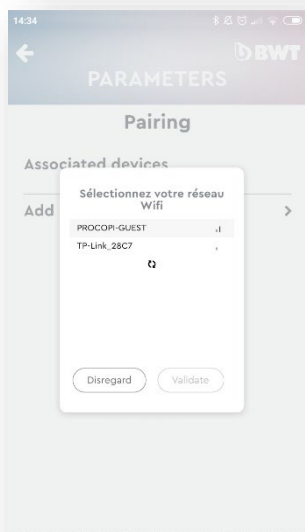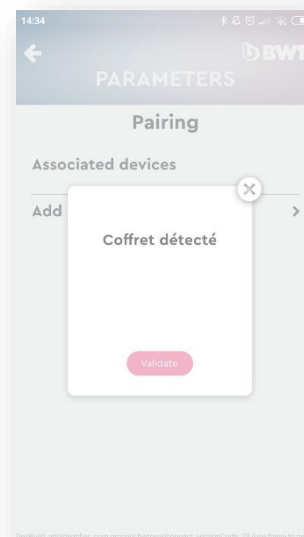

Select your WiFi network or click on ignore to enter the name of the network and the password.

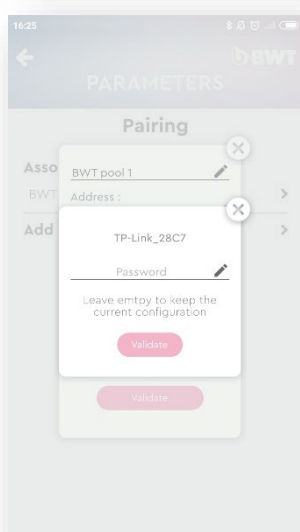

Enter your password.

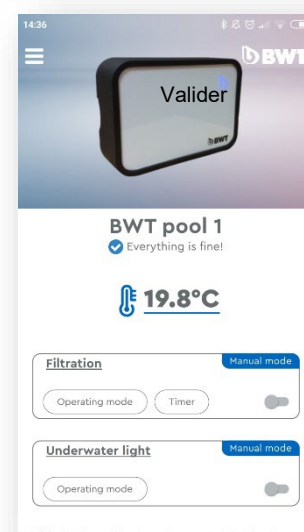

Home page – contd.

6. Parameter setting

To access BWT Pearl Connect settings and the various connected devices, click on the menu button in top left and select Parameters.

